



User Manual

**Inflatable Sea Pools with
a Full Walkway Platform**



Table of contents

Ch	Content	Page
1	Introduction	2
2	Safety Instructions	3
3	Usage Instructions	4
4	Set Up	5
5	Packing	6
6	Problem Solving	7-8
7	FAQ	9
8	Contact	10



1 Introduction

This manual describes how to use Fleximake's Inflatable Sea Pools. Please make sure to read through the safety instructions carefully before using your Sea Pool. Should any instruction be unclear, do not hesitate to contact us.

We hope you enjoy your new equipment.
Fleximake



2 Safety Instructions

These instructions apply to all Inflatable Sea Pools with a Full Walkway Platform products from Fleximake. These products will be referred to as "Sea Pools" or "the equipment." Sea Pools are designed to provide a safe and convenient swimming area in the ocean while on a boat.

USE SEA POOLS ONLY FOR THEIR INTENDED PURPOSE

- Do not use the equipment in dangerous weather conditions.
- Ensure the Sea Pool is securely attached or anchored to the boat to prevent it from drifting away
- Always check the water for hazards such as rocks, jellyfish, or strong currents before use.
- Never use the Sea Pool in rough or turbulent water; calm, stable water is the safest
- Never leave anyone unsupervised while using the Sea Pool, especially in deep or open water
- Do not drag the Sea Pool at high speeds behind a boat, as this can cause excessive stress on the equipment, potentially leading to damage or loss.
- Shoes can be worn if they do not have sharp parts which could pierce the Sea Pools.
- When on land, do not drag through the Sea Pools over the surface, instead carry it.
- Do not bring any sharp items close to or on the Sea Pool.
- When cleaning the equipment, do not use hot water, or cleaning chemicals.
- Do not use a damaged Sea pool.
- Do not put any more weight than the weight limit specified for each respective model.

4 Set up

1. Pick the right location to inflate the Sea Pool. If inflating on land, ensure the area is clear of debris, such as sticks or sharp objects, to prevent punctures. If inflating on a boat, ensure there is enough space to safely inflate the equipment.

2. Roll out the Sea Pool and lay it flat in a smooth area.

3. Open the black valve on the side of the Sea Pool by twisting it counterclockwise until the lip pops off.

4. Attach the grey tube to the blower and insert it into the black valve.



5. Turn on the blower and wait for the Sea Pool to inflate to the desired pressure. If the sea Pool is overfilled, the pump may burn.

6. Turn off the blower and disconnect it by carefully removing the tube from the black valve. Be cautious not to damage the screw thread when reattaching the valve cap; twist it back on in a clockwise direction.

7. Be sure the orange pin is toggled up to prevent continuous air release.

8. Enjoy your Sea Pool

5 Packing

1. Open the black valve by twisting it open in the anticlockwise direction.
2. Push the orange pin in to release the air naturally. This pin is a toggle, so if you wish to stop releasing air, simply push the pin again. If you want to deflate the Sea Pool faster, then attach the blower's tube to the deflation side of the blower, then insert the blower into the valve to deflate the Sea Pool.



3. Once deflated, ensure the pin is pushed again if it was deflated naturally, and close the valve by twisting in a clockwise direction.
4. To store compactly, fold or roll up the equipment.

6 Troubleshooting

1. Does your Inflatable Sea Pool seem to be leaking?

- Ensure the orange pin is toggled up to prevent continuous air release.
- Check that the black valve is fully closed and has been screwed in completely. If not, air may be leaking from the valve.
- Please note that inflatable products cannot remain 100% inflated at all times, as temperature changes can naturally cause some air to be released.

2. A black valve seems to be leaking?


- Black valves are equipped with a rubber inlay that prevents air from escaping. This ring may sometimes come loose and slightly pop out of the cap.
- Closing the valve in this condition may cause the rubber inlay to take permanent damage. Please contact us if you require a rubber ring replacement.

3. What should I do if I damage the surface of my Sea Pool?

- If the surface is damaged, use the provided repair patch. Apply it over the hole and secure it with suitable glue.
- If the damage is too large for the included repair patch to handle, please don't hesitate to contact us for assistance.

4. What happens if the black tube behind the valve moves?

- If the tube moves, you can use the wrench provided to loosen the valve. Then, using your fingers, twist open the cap to reveal the black tube.

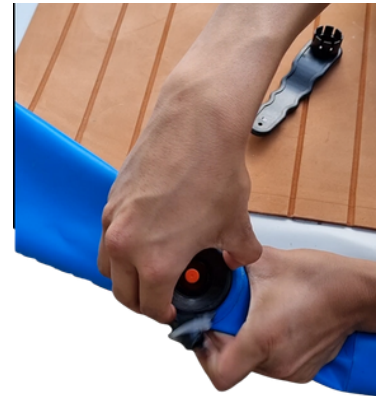

- Reach your fingers inside to align the black tube with the entrance. Then, screw back on your cap.



7 FAQ

Q: How long does it take to inflate a Sea Pool?

A: Inflating the Sea Pool typically takes less than 20 minutes, depending on the size of the equipment.

Q: Can a Sea Pool be damaged by over-pressurisation?

A: Yes, however, it is virtually impossible to reach a damaging pressure level using the provided blowers or through normal use.

Q: What guarantees come with your products?

A: We offer a 12-month warranty on all our products. Please note that transport costs are not included. For more details, refer to our terms and conditions.

Q: What should I do if the Sea Pool gets damaged?

A: Leaks from punctures or seam damage can be repaired using the provided patch and suitable glue.



Contact

Should you have any questions or comments regarding this manual please do not hesitate to contact us.

Fleximake Pty Ltd. 33 Tatterson Rd,
Dandenong South, VIC 3175, Australia
E: sales@fleximake.com.au
T: 1300 195 295, +61 3 8772 2228
W: fleximake.com.au | fmindustrial.com.au
flexitransport.com.au | tarpfactory.com.au
flexiblinds.com.au